

## Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® 5606:

- 1.) Always refer to the safety data sheet (SDS) prior to applying the **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent the the **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** from contacting the skin and eyes.
- 3.) Make sure there is proper airflow in the area where the **Sur-Prep® 5606 Aerosol** will be applied.
- 4.) Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around the **Sur-Prep® 5606 Aerosol**.

## Sur-Prep® 5606 Aerosol and Landing Gear Wipe Features and Benefits:




- 1.) The **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** contain Mil-PRF-5606 hydraulic fluid and do not contain VOC's.
- 2.) The **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** are non Ozone depleting, contain a low toxicity level, and are compatible with materials that are Mil-PRF-5606 hydraulic fluid compatible.
- 3.) The **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** are compatible with the various elastomers and substrates of the landing gear assembly.
- 4.) The hydraulic fluid in the **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** in combination with a cloth easily cleans the strut surface without damaging the strut or elastomers.

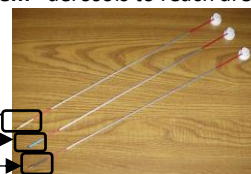
## Procedures For Applying The Sur-Prep® 5606 Aerosol And Landing Gear Wipes and Areas Where Those Materials Can Be Applied:

- 1.) The **Sur-Prep® 5606 Aerosol** and **Landing Gear Wipe** should be applied on landing gear, elastomers, and various substrates.
- 2.) Spray the **Sur-Prep® 5606 Aerosol** on to an approved wiper material.
- 3.) Wipe down the landing gear to remove the contaminants during maintenance, assembly, and overhaul.
- 4.) Any substrates not tested for compatibility with the **Mil-PRF-5606 specification** need to be tested before using **Sur-Prep® 5606** in those areas.
- 5.) Apply by spraying an approved cloth with the **Sur-Prep® 5606 Aerosol**.
- 6.) Wipe the landing gear strut surfaces and any other areas that need to be cleaned.

## Spray Applying The Sur-Prep® 5606 Aerosol With The Formit® Wands:

The **Sur-Prep® 5606 Aerosol** with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach areas that are difficult to access areas.

- \* **Formit® 360° Spray (White Tube) Wand** 
- \* **Formit® Fan Spray Spray (Blue Tube) Wand** 
- \* **Formit® 180° Spray (Black Tube) Wands** 



**Formit® 360° Spray**  
Demonstration Video



**Formit® Fan Spray**  
Demonstration Video



**Formit® 180° Spray**  
Demonstration Video



## Sur-Prep® 5606 Aerosol and Wipe Packaging Pictures and Other Materials To Purchase:

### Sur-Prep® 5606 Aerosol

\*Case of 16 fl oz (473 mL) 12 Aerosols-**103063**

### Sur-Prep® 5606 Wipe

\*8"x9" (20 cm x 23 cm) Pre-Saturated Towelettes-**103769**

\*13"x13" (33 cm x 33 cm) Pre-Saturated Towelettes-**103768**

Gloves | Protective Eyewear | Cloth and Wiping Materials

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)  
6850-01-492-2942 (Formit®-18-360)  
4730-01-632-0156 (Formit®-18-STD-FOG)  
**4730-01-632-0157 (Formit®-48-Fan)**  
1560-01-658-8943 (with metal sleeve)  
4730-01-659-5461 (without metal sleeve) (Formit®-48-360)

### Formit®

\*Formit®-18-Fan-006224

\*Formit®-18-180-006226

\*Formit®-18-360-006227

\*Formit®-18-STD-FOG-008352

\*Formit®-18-90-FOG-008353

\*Formit®-48-Fan-008460

\*Formit®-36-360-009131

\*Formit®-48-360 with metal sleeve-009132

\*Formit®-48-360 without metal sleeve-100424

\*Formit®-29-360-101321

\*Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107)

Sur-Prep® 5606 Wipe NSN's: 9150-01-679-5638 (8"x9" (20 cm x 23 cm) Wipe)  
9150-01-707-1903 (13"x13" (33 cm x 33 cm) Wipe)



← Sur-Prep® 5606 Aerosol

Sur-Prep® 5606 Wipe →



For application questions regarding the Sur-Prep® 5606 Aerosol and Sur-Prep® 5606 Wipe, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.