

## Sur-Prep® SB642 Features and Benefits:

- 1.) Sur-Prep® SB642 is an all in one cleaner, degreaser, and polish protectant that can be used on painted and unpainted substrates.
- 2.) Sur-Prep® SB642 is non-abrasive, free of silicone, and can be applied in all types of weather.
- 3.) Sur-Prep® SB642 is a light tan liquid with a slight odor and comes ready for use
- 4.) Sur-Prep® SB642 has low toxicity and VOC levels and is non ozone depleting.
- 5.) Sur-Prep® SB642 comes ready for use, cleans the surface, and leaves a residual gloss and shine.
- 6.) Sur-Prep® SB642 is an ideal product for mixed fleet carriers and MRO maintenance.

## Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® SB642:

- 1.) Always refer to the safety data sheet (SDS) prior to applying Sur-Prep® SB642 if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent Sur-Prep® SB642 from contacting the skin and eyes.

## Areas Where Sur-Prep® SB642 Should Be Applied To:

- 1.) Sur-Prep® SB642 should be applied on:
  - \* Areas with heavy soil and carbon build up
  - \* Painted and Unpainted Substrates
  - \* All types of finishes
  - \* Areas where a dry wash is necessary - even in high humidity environments.

## Video Demonstration For Applying Sur-Prep® SB642:

- 1.) See video below to observe a visual demonstration with how to apply Sur-Prep® SB642.




## Procedures For Applying Sur-Prep® SB642:

1.) Use the following methods for applying Sur-Prep® SB642:

- \* Spray Equipment
- \* Spray Bottles
- \* Aerosol Cans
- \* **Formit®** Extension Wands-For use with all **Zip-Chem®** aerosols to reach difficult to access areas, such as stringer edges.
- \* Bulk Application Equipment

- \* **Formit®** 360° Spray (White Tube) Wand
- \* **Formit®** Fan Spray Spray (Blue Tube) Wand
- \* **Formit®** 180° Spray (Black Tube) Wands

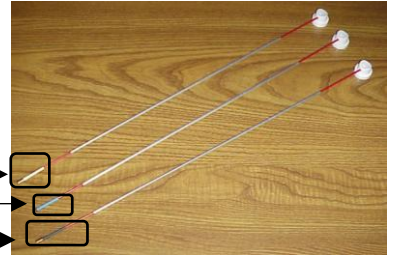

**Formit® 360°** Spray Demonstration Video



**Formit® Fan** Spray Demonstration Video



**Formit® 180°** Spray Demonstration Video



2.) Spray apply **Sur-Prep® SB642** to the area to be cleaned or polished.

3.) For areas that are heavily soiled, white melamine pads can be used because they are effective at deep cleaning the surface.

5.) For final buffing, use micro-fiber towels to complete the **Sur-Prep® SB642** application process.

6.) When applying **Sur-Prep® SB642**, work small areas that are within arm length and apply and buff the **Sur-Prep® SB642** while moving along assigned areas.




7.) If your micro-fiber towel becomes saturated with soils, then stop using that towel and find a fresh and clean one. That way, streaking can be avoided while cleaning a surface or area.

8.) For night operations, make sure that there is enough lighting to ensure that all of the residue from an area or surface is removed and that there are no swirls of buffing or streaking that are present.


**Note:** Mechanical buffing is not required for applying **Sur-Prep® SB642**. **Sur-Prep® SB642** is also different than traditional “dry wash” products because it does not dry or leave a white powder like other products. Apply **Sur-Prep® SB642**, wipe off, and buff the surface to a shine. **Sur-Prep® SB642** should be used in the same manner as you would use other products for detailing a motor vehicle.

## Pictures Of A Before and After Application of Sur-Prep® SB642:

Before Sur-Prep® SB642 is applied

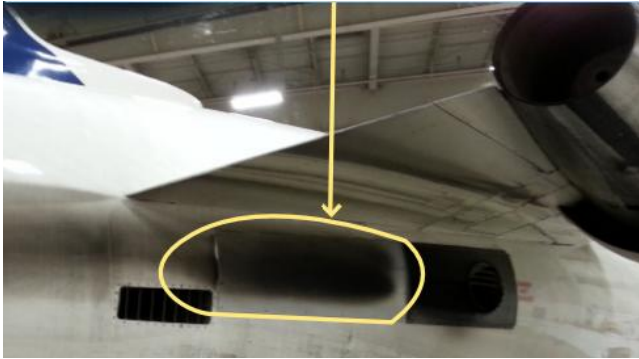

After Sur-Prep® SB642 is applied

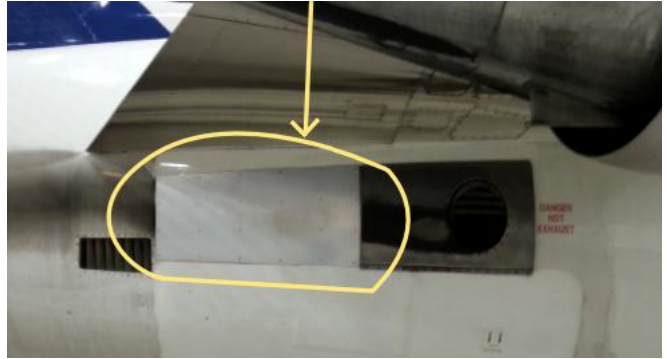

## Sur-Prep® SB642 Product Packaging Pictures and Other Materials To Purchase:



### Sur-Prep® SB642

- \*Case of 12 of 16 Fluid Ounce (473 mL) Aerosols (**100284**)
- \*22 fl oz (651 ml) Pump Spray Bottle (**100361**)
- \*Case of 4 each Gallon (4 each of 3.8L) Cans (**100358**)
- \*5 Gallon (18.9 L) Pail (**100359**)
- \*55 Gallon (208 L) Drum (**100360**)

### Formit® Wands (12 Assemblies Per Package)

- \*Formit®-18-Fan-006224
- \*Formit®-18-180-006226
- \*Formit®-18-360-006227
- \*Formit®-18-STD-FOG-008352
- \*Formit®-18-90-FOG-008353
- \*Formit®-29-360-101321
- \*Formit®-36-360-009131
- \*Formit®-48-360 with metal sleeve-009132
- \*Formit®-48-360 without metal sleeve-10042
- \*Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107)

Formit® NSN's: 4730-01-612-9914, NSN: 4730-01-661-8773 (Formit®-18-Fan); 6850-01-492-2942 (Formit®-18-360); 4730-01-632-0156 (Formit®-18-STD-FOG); 1560-01-658-8943 (with metal sleeve), 4730-01-659-5461 (without metal sleeve) (Formit®-48-360) 4730-01-632-0157 (Formit®-48-Fan)

Protective Eyewear | Gloves | Micro Fiber Towel | Lighting Equipment | White Melamine Pads | Spray Equipment | Bulk Application Equipment

For application questions regarding Sur-Prep® SB642, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.

