




AIRCRAFT CLEANERS & DISINFECTANTS

AERODIS® 7127

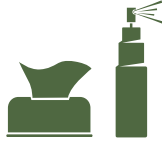

Product description: **DISINFECTANT**

FEATURES:

- ▶ Comes in ready-to-use spray bottles and pre-saturated towellettes
- ▶ White liquid with a citrus odor

KEY BENEFITS:

- ▶ KILLS OVER 99.9% OF GERMS BOTANICALLY, INCLUDING INFLUENZA A2, AVIAN INFLUENZA A (H3N2), HIV-1, PSEUDOMONAS AERUGINOSA (ATCC 15442), RHINOVIRUS TYPE 37, SALMONELLA ENTERICA (SALMONELLA CHOLERAESUIS) (ATCC 10708), STAPHYLOCOCCUS AUREUS (ATCC 6538), AND MRSA (ATCC 33592)
- ▶ DOES NOT STAIN AIRCRAFT INTERIORS
- ▶ CLASSIFIED AS A TOXICITY CATEGORY IV (EPA'S LOWEST CONCERN LEVEL FOR ACUTE TOXICITY CONCERN).
- ▶ NO RINSING OR WIPING IS REQUIRED, EVEN ON FOOD CONTACT SURFACES



Rev: 20065C
1-12-2021


 For more information contact us :
zipchem@addevmaterials.com

 Part of 



AIRCRAFT CLEANERS & DISINFECTANTS

AERODIS® 7127

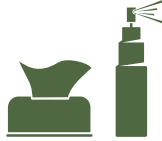

Product description:

DISINFECTANT

KEY BENEFITS:

- ▶ SUITABLE FOR USE ON ANY AIRCRAFT HARD SURFACE, SUCH AS AIRPLANE SURFACES AND CAVITIES, AIRCRAFT LAVATORIES, GALLEYS, WINDOWS, TRANSPARENCIES, TRAY TABLES, SERVICE TRAYS, OVERHEAD BINS, ARM RESTS, HEAD RESTS, VINYL WALLS, AND BULKHEADS

SPECS:

- AMS: 1550 and 1452
- Boeing D6-7127
- T.O.: 1-1-691
- NSN: 6840-01-686-9908 (pre-saturated wipes)
- NSN: 6840-01-686-9917 (case of twelve 23 fl oz spray bottles)

APPLICATIONS

Cleaning: Clean the surface with water and wipe clean

Disinfecting/Deodorizing: 1.) Dampen the surface with the wipe (spot test for surface compatibility).

2.) Leave the surface visibly wet for 10 minutes so that it can air dry.