

Safety Steps and Procedures To Follow Prior To Applying D-5600NS/ZC-600:

Always refer to the safety data sheet (SDS) prior to applying the **D-5600NS/ZC-600** if you have safety questions.

Always wear gloves and protective eyewear to prevent **D-5600NS/ZC-600** from contacting the skin and eyes.

Make sure there is proper airflow in the area where the **D-5600NS/ZC-600** will be applied and wear a respirator or other respirating devices in the area where **D-5600NS/ZC-600** will be applied if ventilation is insufficient.

Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around **D-5600NS/ZC-600**.

D-5600NS/ZC-600 Features and Benefits:

D-5600NS/ZC-600 is a surface prep and mechanical parts cleaner that contains Citra Safe that is an all natural surface prep cleaner that has gained wide acceptance in the aviation industry.

D-5600NS/ZC-600 is a biodegradable solvent replacement for mineral spirits, thinners, toluene, MEK/Toluene blends, and chlorinated solvents and is an environmentally acceptable alternative to many cleaners and solvents.

D-5600NS/ZC-600 is safe for use on metals, painted surfaces, ceramics, fiberglass, and many plastics and leaves no residue behind.

D-5600NS/ZC-600 effectively cleans and degreases electrical components and is effective on greases, oils, and other residues..


Areas Where D-5600NS/ZC-600 Can Be Applied:

D-5600NS/ZC-600 can be applied on metals, painted surfaces, ceramics, fiberglass, electrical components, and many plastics .

Procedures For Applying D-5600NS/ZC-600:

D-5600NS is the aerosol form of **ZC-600** and can be applied via spraying or with the **Formit®** extension wands that are for use with all of **Zip-Chem®** aerosols to reach difficult to access areas.

- * **Formit®** 360° Spray (White Tube) Wand
- * **Formit®** Fan Spray Spray (Blue Tube) Wand
- * **Formit®** 180° Spray (Black Tube) Wands

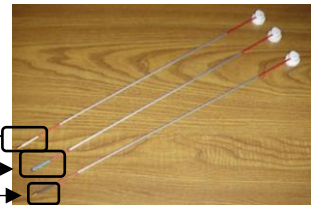

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video



Formit® 180° Spray
Demonstration Video



ZC-600 is the bulk form of **D-5600NS** and can be applied via spray equipment and other bulk application procedures.

D-5600NS/ZC-600 Packaging Pictures and Other Materials To Purchase:

D-5600NS

*Case of 12 of 16 fl oz (473 mL) Aerosols-**002063**

ZC-600

*Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**009428**

*5 Gallon (18.9 Liter) Pails-**009357**

*55 Gallon (208 Liter) Drums-**008565**

*Special packaging upon request

Gloves | Protective Eyewear | Respirating Equipment

Ventilating Equipment | Spray and Bulk Application Equipment

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)
6850-01-492-2942 (Formit®-18-360)
4730-01-632-0156 (Formit®-18-STD-FOG)
1560-01-658-8943 (with metal sleeve)

Formit®

*Formit®-18-Fan-006224

*Formit®-18-180-006226

*Formit®-18-180-006226

*Formit®-18-360-006227

*Formit®-18-STD-FOG-008352

*Formit®-18-90-FOG-008353

*Formit®-48-Fan-008460

*Formit®-48-Fan-008460

*Formit®-36-360-009131

*Formit®-48-360 with metal sleeve-009132

*Formit®-48-360 without metal sleeve-100424

*Formit®-29-360-101321

*Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107)

4730-01-659-5461 (without metal sleeve) (Formit®-48-360)

4730-01-632-0157 (Formit®-48-Fan)



← D-5600NS 16 fl oz (473 mL) Aerosol

ZC-600 1 Gallon (3.8 Liter) Unit →



For application questions regarding the D-5600NS/ZC-600, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.