

Safety Steps and Procedures To Follow Prior To Applying D-5640/ZC 640:

Always refer to the safety data sheet (SDS) prior to applying the **D-5640NS/ZC-640** if you have safety questions.

Always wear gloves and protective eyewear to prevent **D-5640NS/ZC-640** from contacting the skin and eyes.

Make sure there is proper airflow in the area where the **D-5640NS/ZC-640** will be applied and wear respirating devices if the ventilation is insufficient..

Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around the aerosolized form of **D-5640NS/ZC-640**.

D-5640NS/ZC-640 Features and Benefits:

D-5640NS/ZC-640 is a clear, colorless, non-alkaline, and biodegradable general-purpose precision cleaner that is an alternative to chlorofluorocarbon (CFC), chlorocarbons, alkalis, and petroleum solvents for precision metal cleaning in the automotive, aerospace, and general fabrication industries that does not contribute to atmospheric ozone depletion.

D-5640NS/ZC-640 eliminates caustic cleaner hazards, contains no chlorine, and has a very low toxicity level.

D-5640NS/ZC-640 effectively cleans a broad range of soils, such as fingerprint oil, cutting oils, polishing compounds, mineral oils, buffing compounds, printer's inks, mold release agents, grease, cosmoline, silicone oils, asphalt, wax, and adhesives.

Procedures For Applying The D-5640NS/ZC-640 and Applications Where D-5640NS/ZC-640 Can Be Used:

D-5640NS/ZC-640 should be applied on metals and is usually applied as a spray or hand wipe, and then either wiped dry or blown dry with compressed air. **D-5640NS/ZC-640** can be used in the following applications:

- Corrosion Inhibiting Compound Removal
- Degreasing of Transmission Class Breakers
- Pre-Cleaning before Painting
- General Equipment Degreasing
- Handwipe Applications
- Pressure Cleaner Applications
- Parts Washers
- Preclean Transformer Leaks Prior to Sealing


Spray Applying The D-5640NS Aerosol With The Formit® Wands:

The **D-5640NS** aerosol can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas.

* **Formit®** 360° Spray (White Tube) Wand

* **Formit®** Fan Spray (Blue Tube) Wand

* **Formit®** 180° Spray (Black Tube) Wands

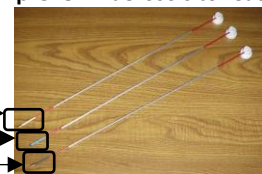

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video



Formit® 180° Spray
Demonstration Video



D-5640NS/ZC-640 Instruction Manual

D-5640NS/ZC-640 Packaging Pictures and Other Materials To Purchase:

D-5640NS/ZC-640

- *Case of 12 of 16 fl oz (473 mL) Aerosols-**002070 (D-5640NS)**
- *Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**009430 (ZC-640)**
- *5 Gallon (18.9 Liter) Pails-**002155 (ZC-640)**
- *55 Gallon (208 Liter) Drums-**008181 (ZC-640)**
- *Special packaging upon request (**ZC-640**)

Gloves | Protective Eyewear | Rag and Wiping Materials

Respirating Equipment | Ventilation Equipment


Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)
6850-01-492-2942 (Formit®-18-360)
4730-01-632-0156 (Formit®-18-STD-FOG)
1560-01-658-8943 (with metal sleeve)

Formit®

- *Formit®-18-Fan-006224
- *Formit®-18-180-006226
- *Formit®-18-360-006227
- *Formit®-18-STD-FOG-008352
- *Formit®-18-90-FOG-008353
- *Formit®-48-Fan-008460
- *Formit®-36-360-009131
- *Formit®-48-360 with metal sleeve-009132
- *Formit®-48-360 without metal sleeve-100424
- *Formit®-29-360-101321
- *Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107

4730-01-659-5461 (without metal sleeve) (Formit®-48-360)

4730-01-632-0157 (Formit®-48-Fan)

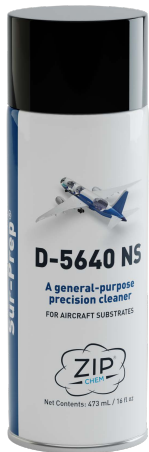

← D-5640NS 16 fl oz (473 mL) Aerosol
NSN: 8030-01-597-6958 (16 fl oz (473 ml) Aerosol)

ZC-640 1 Gallon
(3.8 Liter) Pail →



For application questions regarding the D-5640NS/ZC-640, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.