

Safety Steps and Procedures To Follow Prior To Applying D-5695NS/ZC-695:

Always refer to the safety data sheet (SDS) prior to applying the **D-5695NS/ZC-695** if you have safety or regulatory questions about the product.

Always wear gloves, protective clothing, and protective eyewear to prevent **D-5695NS/ZC-695** from contacting the skin and eyes.

Make sure there is proper airflow and ventilation in the area where the **D-5695NS/ZC-695** will be applied and where a respiration device if the airflow and ventilation in the area where **D-5695NS/ZC-695** will be applied is insufficient.


Make sure there are no sparks, open flames, hot surfaces, or other heat, combustion, and fire ignition sources around **D-5695NS/ZC-695**.

D-5695NS/ZC-695 Features and Benefits:

D-5695NS/ZC-695 delivers an uncontaminated and ultra filtered stream of methanol to the exact area desired including uncontaminated and electronic grade methanol (methyl alcohol) to the exact area that is should be applied to.

Procedures For Applying D-5695NS/ZC-695 and Areas Where It Can Be Applied:

D-5695NS/ZC-695 can be used for the general cleaning of connectors, PC boards and miscellaneous parts.

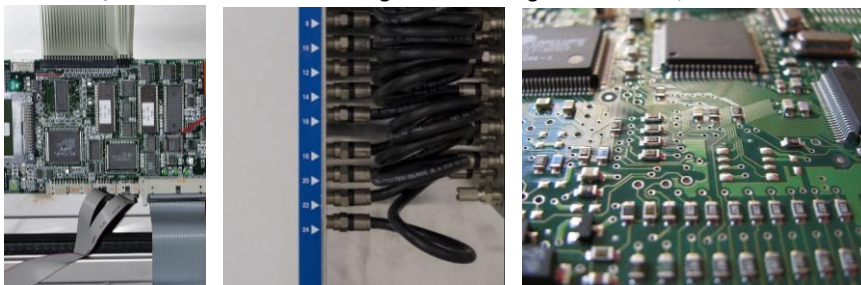


The extended tube fitment for **D-5695NS/ZC-695** can be used to ensure pinpoint accuracy when applying it to an area.

Spray the connector liberally with **D-5695NS/ZC-695** and allow it to dry. Drying can also be accelerated by using the **Sur-Prep® 5604 Vapor-Duster** on it.

D-5695NS is the aerosolized form of **ZC-695** and can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas, such as tubing and other smaller geometries.


- * **Formit®** 360° Spray (White Tube) Wand
- * **Formit®** Fan Spray Spray (Blue Tube) Wand
- * **Formit®** 180° Spray (Black Tube) Wands

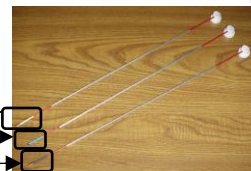

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video

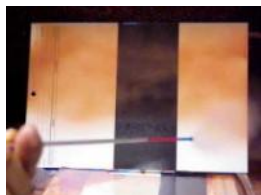

Formit® 180° Spray
Demonstration Video



ZC-695 is the bulk form of **D-5695NS** and can be applied via spray equipment and other bulk application equipment.

D-5695NS/ZC-695 Packaging Pictures and Other Materials To Purchase:

D-5695NS/ZC-695

- *Case of 12 of 16 fl oz (473 mL) Aerosols-**002075 (D-5695NS)**
- *Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**002164 (ZC-695)**
- *5 Gallon (18.9 Liter) Pails-**002165 (ZC-695)**
- *55 Gallon (208 Liter) Drum-**002166 (ZC-695)**

Sur-Prep® 5604

- *12 fl oz (355 mL) Aerosol-**002066**
- *Special packaging upon request

Respirating Devices	Protective Eyewear	Spray Equipment
---------------------	--------------------	-----------------

Gloves	Respirating Devices	Protective Clothing
--------	---------------------	---------------------

Bulk Application Equipment	Ventilation Equipment
----------------------------	-----------------------

Formit®

- *Formit®-18-Fan-006224
- *Formit®-18-180-006226
- *Formit®-18-360-006227
- *Formit®-18-STD-FOG-008352
- *Formit®-18-90-FOG-008353
- *Formit®-48-Fan-008460
- *Formit®-36-360-009131
- *Formit®-48-360 with metal sleeve-**009132**
- *Formit®-48-360 without metal sleeve-**100424**
- *Formit®-29-360-**101321**
- *Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-**100107**)

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)
4730-01-632-0156 (Formit®-18-STD-FOG)

6850-01-492-2942 (Formit®-18-360)
1560-01-658-8943 (with metal sleeve)
4730-01-659-5461 (without metal sleeve) (Formit®-48-360)
4730-01-632-0157 (Formit®-48-Fan)



← D-5695NS 16 fl oz (473 mL) Aerosol

For application questions regarding the D-5695NS/ZC-695, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.