

Safety Steps and Procedures To Follow Prior To Applying D-5699NS:

- 1.) Always refer to the safety data sheet (SDS) prior to applying the **D-5699NS** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent **D-5699NS** from contacting the skin and eyes.
- 3.) Make sure there is proper airflow in the area where the **D-5699NS** will be applied.
- 4.) Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around **D-5699NS**.
- 5.) Where a respirator or other respirating devices in the area where **D-5699NS** will be applied.

D-5699NS Features and Benefits:

- 1.) **D-5699NS** is an aircraft fire detection system connector cleaner that is Non-ozone depleting and is the preferred cleaning solvent for use with Hermetic Connectors.
- 2.) **D-5699NS** quickly delivers an uncontaminated and ultra filtered stream of anhydrous isopropyl alcohol to the exact area desired.

Procedures For Applying D-5699NS and Areas Where It Can Be Applied:

- 1.) Use **D-5699NS** on hermetic connectors and for ensuring that the mating connector is clean and dry prior to installation.

Note: Do not use **D-5699NS** on activated circuits because of flammability risks.

- 2.) Spray connector with **D-5699NS** liberally and allow it to dry or accelerate drying with the **Sur-Prep® 5604** Vapor-Duster.

Note: Pinpoint accuracy is available if the extended tube fitment is used.


Using D-5699NS With The Formit® Wands:

D-5699NS can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas.

* **Formit®** 360° Spray (White Tube) Wand

* **Formit®** Fan Spray (Blue Tube) Wand

* **Formit®** 180° Spray (Black Tube) Wands

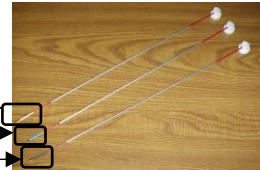

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video



Formit® 180° Spray
Demonstration Video



D-5699NS Packaging Pictures and Other Materials To Purchase:

D-5699NS

*Case of 12 of 16 fl oz (473 mL) Aerosols-**002076**

Sur-Prep® 5604

*Case of 12 of 12 fl oz (355 mL) Aerosols-**002066**

*Special packaging upon request

Gloves	Protective Eyewear	Respirating Equipment
--------	--------------------	-----------------------

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (**Formit®-18-Fan**)
6850-01-492-2942 (**Formit®-18-360**)
4730-01-632-0156 (**Formit®-18-STD-FOG**)
1560-01-658-8943 (**with metal sleeve**)
4730-01-632-0157 (**Formit®-48-Fan**)
4730-01-659-5461 (**without metal sleeve**) (**Formit®-48-360**)

Formit®

***Formit®-18-Fan-006224**

***Formit®-18-180-006226**

***Formit®-18-360-006227**

***Formit®-18-STD-FOG-008352**

***Formit®-18-90-FOG-008353**

***Formit®-48-Fan-008460**

***Formit®-36-360-009131**

***Formit®-48-360** with metal sleeve-**009132**

***Formit®-48-360** without metal sleeve-**100424**

***Formit®-29-360-101321**

***Formit®** Sample Pack (3 each of **Formit®-18-Fan**, **Formit®-18-180**, **Formit®-18-360**, **Formit®-18-STD-FOG-100107**)



← **D-5699NS** 16 fl oz (473 mL) Aerosol

For application questions regarding the **D-5699NS**, contact **Zip-Chem® Aviation Products** at (1) 408 782 2335 or zipchem@addevmaterials.com.