

## Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® 3150:

- 1.) Always refer to the safety data sheet (SDS) prior to applying the **Sur-Prep® 3150** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent **Sur-Prep® 3150** from contacting the skin and eyes.
- 3.) Make sure there is proper airflow in the area where the **Sur-Prep® 3150** will be applied.
- 4.) Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around **Sur-Prep® 3150**.
- 5.) Where a respirator or other respirating devices in the area where **Sur-Prep® 3150** will be applied.

## Sur-Prep® 3150 Features and Benefits:

- 1.) **Sur-Prep® 3150** is a hydrocarbon solvent blend cleaning compound that prepares critical surface areas prior to painting or bonding and can be used as a replacement for PD-680 Ty I Solvents.
- 2.) The **Sur-Prep® 3150** works on oil and oil-bonded contaminants, solvates a broad range of contaminants from substrate surface to help coatings and sealants adhere to aircraft substrates, and dries quickly.


## Procedures For Applying The Sur-Prep® 3150 and Areas Where It Can Be Applied:

- 1.) **Sur-Prep® 3150** should be applied on critical surface areas and aircraft substrates.
- 2.) Apply **Sur-Prep® 3150** to the surface that needs to be cleaned and wipe dry with a rag afterwards.

## Spray Applying The Sur-Prep® 3150 Aerosol With The Formit® Wands:

The **Sur-Prep® 3150** aerosol can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas.

- \* **Formit® 360°** Spray (White Tube) Wand
- \* **Formit® Fan Spray** (Blue Tube) Wand
- \* **Formit® 180°** Spray (Black Tube) Wands

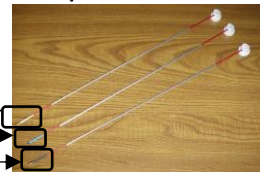

**Formit® 360°** Spray  
Demonstration Video



**Formit® Fan Spray**  
Demonstration Video



**Formit® 180°** Spray  
Demonstration Video



## Sur-Prep® 3150 Packaging Pictures and Other Materials To Purchase:

### Sur-Prep® 3150

- \*Case of 12 of 16 fl oz (473 mL) Aerosols-**011007**
- \*Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**010859**
- \*5 Gallon (18.9 Liter) Pails-**010860**
- \*55 Gallon (208 Liter) Drums-**010861**
- \*Special packaging upon request

.....  
Gloves | Protective Eyewear | Rag and Wiping Materials  
.....

Respirating Equipment  
.....

### Formit®

- \*Formit®-18-Fan-006224
- \*Formit®-18-180-006226
- \*Formit®-18-360-006227
- \*Formit®-18-STD-FOG-008352
- \*Formit®-18-90-FOG-008353
- \*Formit®-48-Fan-008460
- \*Formit®-36-360-009131
- \*Formit®-48-360 with metal sleeve-**009132**
- \*Formit®-48-360 without metal sleeve-**100424**
- \*Formit®-29-360-101321
- \*Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107)

- Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)  
6850-01-492-2942 (Formit®-18-360)  
4730-01-632-0156 (Formit®-18-STD-FOG)  
1560-01-658-8943 (with metal sleeve)  
4730-01-659-5461 (without metal sleeve) (Formit®-48-360)  
4730-01-632-0157 (Formit®-48-Fan)



← Sur-Prep® 3150 16 fl oz (473 mL) Aerosol  
NSN: 6850-01-671-6433 (16 fl oz (473 mL) Aerosol)

Sur-Prep® 3150  
1 Gallon (3.8 Liter) Can →



.....  
For application questions regarding the Sur-Prep® 3150, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.