

## Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® 3170:

- 1.) Always refer to the safety data sheet (SDS) prior to applying the **Sur-Prep® 3170** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent **Sur-Prep® 3170** from contacting the skin and eyes.
- 3.) Make sure there is proper airflow in the area where the **Sur-Prep® 3170** will be applied.
- 4.) Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around the aerosolized form of **Sur-Prep® 3170**.
- 5.) Where a respirator or other respirating devices in the area where **Sur-Prep® 3170** will be applied.

## Sur-Prep® 3170 Features and Benefits:

- 1.) **Sur-Prep® 3170** is a general purpose hydrocarbon solvent blend cleaner with a high flash point, a low odor, a low vapor pressure, and a broad solvency range that works on a variety of contaminants, such as oil and oil-bonded contaminants.
- 2.) **Sur-Prep® 3170** cleans surfaces that are contaminated with difficult to remove dirt and grease and solvates a broad range of contaminants from the substrate surface in preparation for further work.


## Procedures For Applying The Sur-Prep® 3170 and Areas Where It Can Be Applied:

- 1.) **Sur-Prep® 3170** should be applied on surfaces.
- 2.) Wipe area, surface, or object dry with a rag.

## Spray Applying The Sur-Prep® 3170 Aerosol With The Formit® Wands:

The **Sur-Prep® 3170** aerosol can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas.

- \* **Formit®** 360° Spray (White Tube) Wand
- \* **Formit®** Fan Spray (Blue Tube) Wand
- \* **Formit®** 180° Spray (Black Tube) Wands

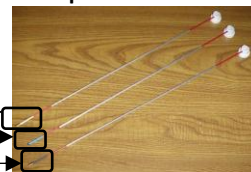

**Formit® 360° Spray**  
Demonstration Video



**Formit® Fan Spray**  
Demonstration Video



**Formit® 180° Spray**  
Demonstration Video



## Sur-Prep® 3170 Packaging Pictures and Other Materials To Purchase:

### Sur-Prep® 3170

- \*Case of 12 of 16 fl oz (473 mL) Aerosols-**011047**
- \*Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**011076**
- \*5 Gallon (18.9 Liter) Pails-**011077**
- \*55 Gallon (208 Liter) Drums-**011078**
- \*Special packaging upon request

.....  
Gloves | Protective Eyewear | Rag and Wiping Materials  
.....

Respirating Equipment  
.....

**Formit® NSN's:** 4730-01-612-9914, 4730-01-661-8773 (**Formit®-18-Fan**)  
6850-01-492-2942 (**Formit®-18-360**)  
4730-01-632-0156 (**Formit®-18-STD-FOG**)  
1560-01-658-8943 (**with metal sleeve**)

### Formit®

- \***Formit®-18-Fan-006224**
- \***Formit®-18-180-006226**
- \***Formit®-18-360-006227**
- \***Formit®-18-STD-FOG-008352**
- \***Formit®-18-90-FOG-008353**
- \***Formit®-48-Fan-008460**
- \***Formit®-36-360-009131**
- \***Formit®-48-360** with metal sleeve-**009132**
- \***Formit®-48-360** without metal sleeve-**100424**
- \***Formit®-29-360-101321**
- \***Formit®** Sample Pack (3 each of **Formit®-18-Fan**, **Formit®-18-180**, **Formit®-18-360**, **Formit®-18-STD-FOG-100107**)

.....  
4730-01-659-5461 (**without metal sleeve**) (**Formit®-48-360**)  
4730-01-632-0157 (**Formit®-48-Fan**)  
.....



← Sur-Prep® 3170 16 fl oz (473 mL) Aerosol

.....  
For application questions regarding the **Sur-Prep® 3170**, contact **Zip-Chem® Aviation Products** at (1) 408 782 2335 or zipchem@addevmaterials.com.