

Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® 5677:

- 1.) Always refer to the safety data sheet (SDS) prior to applying the **Sur-Prep® 5677** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent **Sur-Prep® 5677** from contacting the skin and eyes.
- 3.) Make sure there is proper airflow in the area where the **Sur-Prep® 5677** will be applied.
- 4.) Make sure there are no sparks, open flames, hot surfaces, or other heat and fire ignition sources around **Sur-Prep® 5677**.
- 5.) Where a respirator or other respirating devices in the area where **Sur-Prep® 5677** will be applied.

Sur-Prep® 5677 Features and Benefits:

- 1.) **Sur-Prep® 5677** a fast evaporating solvent blend degreaser and contact cleaner that works on oil and oil-bonded contaminants, penetrates to remove soils and greases, dries quickly and completely, contains no chlorinated solvents, contains a spray-any-way spray valve, and leaves no residue behind.
- 2.) **Sur-Prep® 5677** helps coatings and sealants adhere to aircraft substrates and solvates a broad range of contaminants from substrate surface.


Procedures For Applying The Sur-Prep® 5677 and Areas Where It Can Be Applied:

- 1.) **Sur-Prep® 5677** should be used on critical surface areas, electrical contacts, non-activated circuits, and aircraft substrates as well as preparing critical surface areas prior to painting or bonding.
- 2.) **Sur-Prep® 5677** can also be used for the contact cleaning on non-activated circuits as well as general degreasing.
- 3.) Apply **Sur-Prep® 5677** to the surface to be cleaned.

Spray Applying The Sur-Prep® 5677 Aerosol With The Formit® Wands:

The **Sur-Prep® 5677** aerosol can be used with the **Formit®** extension wands that are for use with all **Zip-Chem®** aerosols to reach difficult to access areas.


- * **Formit®** 360° Spray (White Tube) Wand
- * **Formit®** Fan Spray Spray (Blue Tube) Wand
- * **Formit®** 180° Spray (Black Tube) Wands

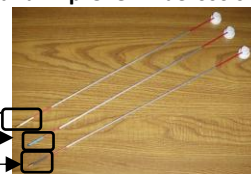

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video

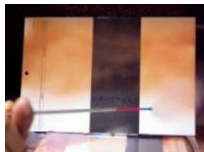

Formit® 180° Spray
Demonstration Video



Sur-Prep® 5677 Packaging Pictures and Other Materials To Purchase:

Sur-Prep® 5677

- *Case of 12 of 16 fl oz (473 mL) Aerosols-**100474**
- *Case of 4 each Gallon (4 each of 3.8 Liter) Cans-**100478**
- *5 Gallon (18.9 Liter) Pails-**100481**
- *55 Gallon (208 Liter) Drums-**100482**
- *Special packaging upon request

Gloves	Protective Eyewear	Respirating Equipment
--------	--------------------	-----------------------

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (**Formit®-18-Fan**)
 6850-01-492-2942 (**Formit®-18-360**)
 4730-01-632-0156 (**Formit®-18-STD-FOG**)
 4730-01-632-0157 (**Formit®-48-Fan**)
 1560-01-658-8943 (**with metal sleeve**)
 4730-01-659-5461 (**without metal sleeve**) (**Formit®-48-360**)

Formit®

- ***Formit®-18-Fan-006224**
- ***Formit®-18-180-006226**
- ***Formit®-18-360-006227**
- ***Formit®-18-STD-FOG-008352**
- ***Formit®-18-90-FOG-008353**
- ***Formit®-48-Fan-008460**
- ***Formit®-36-360-009131**
- ***Formit®-48-360 with metal sleeve-009132**
- ***Formit®-48-360 without metal sleeve-100424**
- ***Formit®-29-360-101321**
- ***Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107**



← **Sur-Prep® 5677 NSN:** 6850-01-684-6911
16 fl oz (473 mL) Aerosol

Sur-Prep® 5677 →
1 Gallon
(3.8 Liter) Can



For application questions regarding the **Sur-Prep® 5677**, contact **Zip-Chem® Aviation Products** at (1) 408 782 2335 or zipchem@addevmaterials.com.