

Safety Steps and Procedures To Follow Prior To Applying Sur-Prep® 608:

- 1.) Always refer to the safety data sheet (SDS) prior to applying **Sur-Prep® 608** if you have safety questions.
- 2.) Always wear gloves and protective eyewear to prevent **Sur-Prep® 608** from contacting the skin and eyes.
- 3.) Make sure there are no heat and ignition sources present in the area where **Sur-Prep® 608** will be applied.

Sur-Prep® 608 Features and Benefits:

- 1.) **Sur-Prep® 608** is a clear and colorless high penetration fast evaporating avionic cleaner and degreaser that contains no ozone depleting chemicals and is non-corrosive..
- 2.) **Sur-Prep® 608** is safe for use on all metal surfaces, cleans avionic parts without damaging acrylic and polycarbonate plastics, and is safe on polystyrene and other plastic components.
- 3.) **Sur-Prep® 608** removes contaminants, dust, fingerprints, and oils, quickly penetrates and removes the toughest soils and contaminants, and evaporates quickly.

Note: **Sur-Prep® 608** has been discontinued as it contains 3M HFE material which 3M has decided to stop manufacturing. Customers should consider stockpiling **Sur-Prep® 608** while it is still available.


Areas Where Sur-Prep® 608 Can Be Applied On:

Sur-Prep® 608 can be used on electric components and circuits, precision instruments, switches, motors, generators, tools, metal surfaces, other plastic components, and acrylic, polystyrene, and polycarbonate substrates.

Sur-Prep® 608 Application To Electronic Components:



Preparing To Spray **Sur-Prep® 608** on electronic components

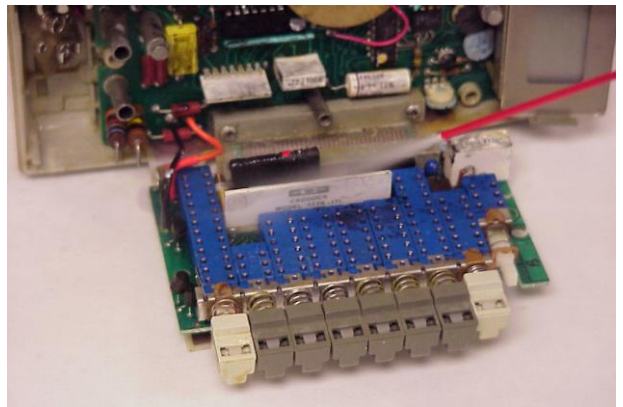

Sur-Prep® 608 being sprayed on electronic components.


Procedures For Applying Sur-Prep® 608:

Sur-Prep® 608 can be applied by a variety of methods, such as aerosol and spray equipment.

Spray Applying The Sur-Prep® 608 Aerosol With The Formit® Wands:

The Sur-Prep® 608 aerosol can be used with the Formit® extension wands that are for use with all Zip-Chem® aerosols to reach difficult to access areas.

- * Formit® 360° Spray (White Tube) Wand
- * Formit® Fan Spray (Blue Tube) Wand
- * Formit® 180° Spray (Black Tube) Wands

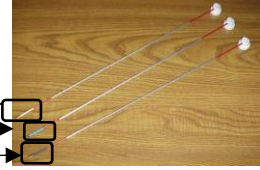

Formit® 360° Spray
Demonstration Video



Formit® Fan Spray
Demonstration Video



Formit® 180° Spray
Demonstration Video



Sur-Prep® 608 Product Packaging Pictures and Other Materials To Purchase:

Sur-Prep® 608

- *Case of 12 of 16 fl oz (473 mL) Aerosols (008593)
- *Special packaging upon request
- *5 Gallon (18.9 Liter) Pails-**011077**
- *55 Gallon (208 Liter) Drums-**011078**
- *Special packaging upon request

Formit®

- *Formit®-18-Fan-006224
- *Formit®-18-180-006226
- *Formit®-18-360-006227
- *Formit®-18-STD-FOG-008352
- *Formit®-18-90-FOG-008353
- *Formit®-48-Fan-008460
- *Formit®-36-360-009131
- *Formit®-48-360 with metal sleeve-009132
- *Formit®-48-360 without metal sleeve-100424
- *Formit®-29-360-101321
- *Formit® Sample Pack (3 each of Formit®-18-Fan, Formit®-18-180, Formit®-18-360, Formit®-18-STD-FOG-100107)

Gloves | Protective Eyewear | Spray Equipment

- Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (Formit®-18-Fan)
 6850-01-492-2942 (Formit®-18-360)
 4730-01-632-0156 (Formit®-18-STD-FOG)
 1560-01-658-8943 (with metal sleeve)
 4730-01-659-5461 (without metal sleeve) (Formit®-48-360)
 4730-01-632-0157 (Formit®-48-Fan)



← **Sur-Prep® 608 16 fl oz (473 mL) Aerosol**
 NSN: 6850-01-612-6962 (16 fl oz (473 mL) Aerosol)

For application questions regarding the Sur-Prep® 608, contact Zip-Chem® Aviation Products at (1) 408 782 2335 or zipchem@addevmaterials.com.