

Safety Steps and Procedures To Follow Prior To Applying D-5695NS:

Always refer to the **safety data sheet (SDS)**, **technical data sheet (TDS)**, and **label** prior to applying the **D-5695NS** if you have any questions about this product.

Always wear gloves, protective clothing, and protective eyewear to prevent **D-5695NS** from contacting the skin and eyes.

Make sure there is proper airflow and ventilation in the area where **D-5695NS** will be applied and wear a proper mask to prevent the inhalation of fumes.

Make sure there are no sparks, open flames, or other combustion sources in the area where **D-5695NS** will be applied.


Have adequate lighting available to see where **D-5695NS** is being applied and to inspect areas prior to applying **D-5695NS** for signs of contamination and rework.

D-5695NS Features and Benefits:

D-5695NS delivers an uncontaminated and ultra filtered stream of methanol to the exact area desired including uncontaminated and electronic grade methanol (methyl alcohol) to the exact area that is should be applied to.

Procedures For Applying D-5695NS and Areas Where It Can Be Applied:

D-5695NS can be used for the general cleaning of connectors, PC boards and miscellaneous parts.

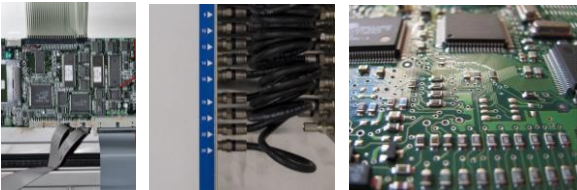

The extended tube fitment for **D-5695NS** can be used to ensure pinpoint accuracy when applying it to an area.

Spray the connector liberally with **D-5695NS** and allow it to dry. Drying can also be accelerated by using the **Sur-Prep® 5604 Vapor-Duster** on it.

D-5695NS can be applied via aerosol, the **Formit®** extension wands for reaching difficult to access areas, such as tubing and other smaller geometries, and the **Zip-Chem® Aerosol Trigger Sprayer** that is designed for use with any **Zip-Chem®** aerosol can.


Zip-Chem® Aerosol Trigger Sprayer →



***Formit® 360° Spray (White Tube) Wand** →

***Formit® Fan Spray (Blue Tube) Wand** →

***Formit® 180° Spray (Black Tube) Wand** →

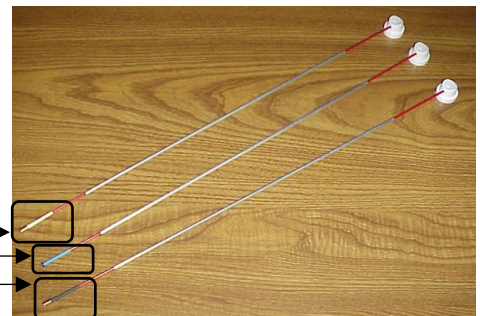

Procedures For Applying D-5695NS and Areas Where It Can Be Applied (Continued From Page 1):

Formit® 360° Spray Demonstration Video



Formit® Fan Spray Demonstration Video



Formit® 180° Spray Demonstration Video



Please consult a **Zip-Chem®** application expert for tips on how to properly apply **D-5695NS**.

D-5695NS Packaging Pictures and Other Materials To Purchase:

D-5695NS

*Case of 12 of 16 fl oz (473 mL) Aerosols-**002075 (D-5695NS)**

Zip-Chem® Aerosol Trigger Sprayer

* **010040**

Sur-Prep® 5604

*12 fl oz (355 mL) Aerosol-**002066**

*Special packaging upon request

Proper Mask | Protective Eyewear | Ventilation Equipment

Gloves | Lighting Equipment | Protective Clothing

Rags, cloth, towels, and other proper wiping devices

Spill containment vessels and other proper devices for collecting runoff material

Formit®

***Formit®-18-Fan-006224**

***Formit®-18-180-006226**

***Formit®-18-360-006227**

***Formit®-18-STD-FOG-008352**

***Formit®-18-90-FOG-008353**

***Formit®-48-Fan-008460**

***Formit®-36-360-009131**

***Formit®-48-360 with metal sleeve-009132**

***Formit®-48-360 without metal sleeve-100424**

***Formit®-29-360-101321**

***Formit® Sample Pack** (3 each of **Formit®-18-Fan**, **Formit®-18-180**, **Formit®-18-360**, **Formit®-18-STD-FOG-100107**)

Formit® NSN's: 4730-01-612-9914, 4730-01-661-8773 (**Formit®-18-Fan**)

4730-01-632-0156 (**Formit®-18-STD-FOG**)

6850-01-492-2942 (**Formit®-18-360**)

1560-01-658-8943 (**with metal sleeve**)

4730-01-659-5461 (**without metal sleeve**) (**Formit®-48-360**)

4730-01-632-0157 (**Formit®-48-Fan**)

← **D-5695NS 16 fl oz (473 mL) Aerosol**



For application questions regarding the **D-5695NS**, contact **Zip-Chem® Aviation Products** at (1) 408 782 2335 or zipchem@addevmaterials.com.